



## While Disinfecting is in Progress

This room is disinfected automatically with a disinfectant applied as a fog.




The room air will contain highly concentrated hydrogen peroxide ( $\text{H}_2\text{O}_2$ ) while disinfecting is in progress. This can be hazardous to the eyes and respiratory system. \*



The room may only be re-entered or used after the disinfection programme has been completed! \*



Leave the ventilation system switched off.

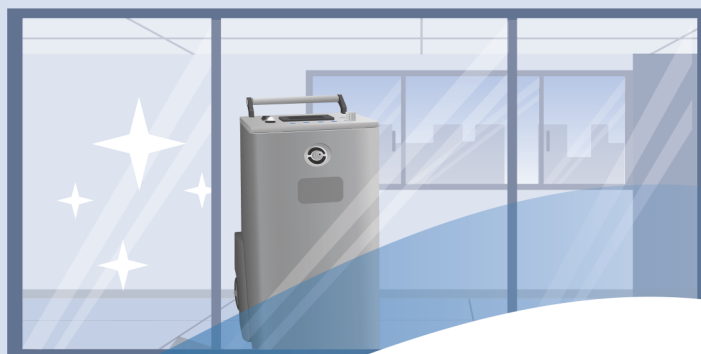

## After Disinfection

A sign on the door shows the earliest time at which you may re-enter the room or switch the ventilation system back on.



The disinfectant fog requires a minimum of two hours after fogging is completed to take effect and to degrade.



Afterwards, the room may be ventilated or you can wait until the disinfectant fog has degraded to a safe level.\*

\* It is not safe to enter the room without a respirator (protection class ABEK P3) after disinfecting until the hydrogen peroxide ( $\text{H}_2\text{O}_2$ ) concentration in the air has fallen below 1ppm.



**SANOSIL**  
DISINFECTANTS FOR LIFE 

**SANOSIL AG** • CH-8634 Hombrechtikon • Switzerland

E-mail: [service@sanosil.com](mailto:service@sanosil.com)

[www.sanosil.com](http://www.sanosil.com)

## Caution (atomized Sanosil Disinfectant):

When the Q-Jet has completed its dispensing cycle, the room will be full of atomized Sanosil Disinfectant. The treated room **MUST REMAIN UNOCCUPIED FOR AT LEAST 120 MINUTES AFTER FOGGING**. 120 minutes is the minimum wait time and means not that the room is safe to re-enter or reoccupy. Air room well before reoccupy.

When room re-entry is required before treatment process is completed or to perform a H<sub>2</sub>O<sub>2</sub> level check, proper personal equipment (PPE) including wraparound style goggles; respirator mask (filter class ABE1) filtering hydrogen peroxide (for example: 3M 4277 or 3M 7500 mask with 6057 filter) and gloves should be worn to safely enter the room.

## Sanosil Disinfectant Warnings

Users should familiarize themselves with the Sanosil disinfectant before handling the product. It is essential that Sanosil users follow all safety warnings on the labels.

Use proper personal protection equipment (wrap-around style goggles, gloves) when pouring disinfectant fluid into the device. Avoid splashing or overfilling which could harm the user or the device. White spots on the hands will not harm the skin. They disappear within a few minutes.

## Operating Manuals Sanosil Q-Jet devices

Please read the Sanosil Q-Jet Manual carefully before use follow the QR code for your operating manual:

<https://www.sanosil.com/de/sanosil-c-series-devices>



## Caution (Sanosil Q-Jet device)

1. KEEP OUT OF REACH FOR CHILDREN
2. Carefully read all instructions, warning, caution and first aid statements prior to use.
3. Use only as directed.
4. The device is designed for easy-use. However, only properly trained individuals should use this device.
5. Do not leave the device unattended between uses.
6. Electric shock hazard. Do not plug in if electrical plug or parts are wet.
7. Use only a Sanosil supplied electrical power cord.
8. Take care to prevent water or other fluid from entering the device. Should this occur, allow to completely dry before use. Check the accuracy of all operating functions.
9. Always unplug the power cord from the outlet before moving the device.
10. There are no user-serviceable parts inside the device. An operator may only perform maintenance procedures specifically described in this manual, all other repairs should be made by the manufacturer.
11. Position the device on a secure surface to prevent rolling or moving while in use.
12. Do not tip the device on its side at any time unless completely empty and dry.
13. Protect this device from severe impact and shock.
14. While in use, the body of the device may become warm to the touch. Handle with caution.
15. Read the specific warning and caution statements of the Sanosil disinfectant you use.
16. To ensure effectiveness and safety, use **only** with Sanosil disinfectant. Using any other manufacturer's disinfecting or cleaning product will result in serious injury, exposure and environmental damage.
17. Sanosil Ltd. is not responsible for any injury or damage caused by using this device outside of the specific parameters detailed in this manual.
18. Store in a safe, dry location. Do not place anything on top of the device. Store in an upright position.



**SANOSIL**  
DISINFECTANTS FOR LIFE 

**SANOSIL AG** • CH-8634 Hombrechtikon • Switzerland

E-mail: [service@sanosil.com](mailto:service@sanosil.com)

[www.sanosil.com](http://www.sanosil.com)